

NO.	Part Name or Items ENGLISH	LABOR HOUR
1	ELECTRIC DRIVE SYSTEM ASSEMBLY	9.4
2	WIRING HARNESS ASSY-PEU	1
3	ELECTRIC MOTOR PAD	3
4	BRACKET-WATER HOSE	0.3
5	ELECTRONIC_WATER_PUMP (DRIVE MOTOR)	1
6	ELECTRONIC_WATER_PUMP (POWER BATTERY)	3.4
7	BRACKET-MOTOR WATER PUMP	1
8	BRACKET-BATTERY WATER PUMP	0.7
9	PUMP-ELECTRIC HEATING	1
10	BRACKET-ELECTRIC HEATING PUMP	0.3
11	BRACKET-ENGINE MOUNTING LH	7.9
12	ENGINE INSULATOR-LH	7.9
13	BRACKET-ENGINE MOUNTING RH	7.9
14	ENGINE INSULATOR-RH	7.9
15	BRACKET-ENGINE MOUNTING RR	7.9
16	ENGINE INSULATOR-RR	7.9
17	ELECTRONIC_ACCELERATION_PEDAL	0.3
18	COVER-POWERTRAIN WIRING HARNESS	1
19	LOCK WASHER	1
20	WIRING HARNESS-IPU GROUND	1
21	BATTERY CHARGER	2.2
22	VEHICLE CONTROL UNIT	0.7
23	RADIATOR-RADIATOR (DCT)	1.4
24	HOSE-RADITOR OUTLET	0.7
25	CLAMP-COOLING PIPE	0.3
26	HOSE-RADITOR INLET	0.7
27	THREE WAY SOLENOID ASSY	1
28	VALVE-FOUR WAY	0.3
29	BRACKET-SOLENOID VALVE	0.3
30	PIPE-ELECTRONIC WATER PUMP WATER INLET	1
31	PIPE-ELECTRONIC WATER PUMP WATER OUTLET	1
32	DRIVE MOTOR RADIATOR VENT	0.3
33	VENTILATION TUBE-ELECTRIC HEATING	0.3
34	VENTILATION TUBE-DRIVE MOTOR COOLING	0.3
35	PIPE-CHARGER WATER OUTLET	1.1
36	PIPE-THREE WAY ELECTROVALVE INLET	1
37	CLIP-ELECTRIC MOTOR COOLING HOSE	0.3
38	RADIATOR VENT	1
39	FAN SHROUD MODULE-FAN SHROUD MODULE	1.5
40	COOLING FAN CONTROLLER	0.3
41	RAIDATOR LOWER RUBBER CUSHION	1.6
42	RUBBER PAD	1
43	RESERVE TANK ASSY(SIDE	1
44	RESERVE TANK CAP	0.2
45	RESEVIOR-TANK	1
46	BRACKET-EXPANSION TANK	1.5
47	VENTILATION PLUG PLUG (ELECTRIC DRIVE SYSTEM ASSEMBLY)	3
48	VENT PIPE	3
49	OIL COOLER ASSY	7.9

50	ELECTRONIC OIL PUMP	7.9
51	SEAL-DIFFERENTIAL	3
52	DEVICE-ELECTRONIC GEAR SHIFT	0.3
53	FRONT SUBFRAME ASSY	2.2
54	RIGHT REAR STIFFENER,FRONT SUBFRAME	2.2
55	BRACKET-BATTERY UNDER PLATE MOUNTING	2.2
56	LEFT REAR STIFFENER,FRONT SUBFRAME	2.2
57	MOUNTING-POWERTRAIN	1.2
58	SHOCK ABSORBER ASSY-FRT SUSPENSION STRUT LH	1.2
59	SHOCK ABSORBER ASSY-FRT SUSPENSION STRUT RH	1.2
60	LEFT FRONT STRUT	0.8
61	RIGHT FRONT STRUT	0.8
62	LEFT FRONT SHOCK ABSORBER DUST COVER	0.8
63	RIGHT FRONT SHOCK ABSORBER DUST COVER	0.8
64	LEFT FRONT SUSPENSION STRUT BEARING	0.8
65	RIGHT FRONT SUSPENSION STRUT BEARING	0.8
66	LEFT FRONT SHOCK ABSORBER UPPER BRACKET	0.8
67	RIGHT FRONT SHOCK ABSORBER UPPER BRACKET	0.8
68	DUST COVER OF LEFT FRONT SHOCK ABSORBER	0.8
69	DUST COVER OF RIGHT FRONT SHOCK ABSORBER	0.8
70	LEFT FRONT SUSPENSION COIL SPRING	1.8
71	RIGHT FRONT SUSPENSION COIL SPRING	1.8
72	UPPER WASHER OF LEFT FRONT COIL SPRING	1.8
73	UPPER WASHER OF RIGHT FRONT COIL SPRING	1.8
74	SHAFT ASSY-FRT SUSPENSION	2
75	FRONT STABILIZER BAR LEFT LINK ASSEMBLY	0.5
76	FRONT STABILIZER BAR RIGHT LINK ASSEMBLY	0.5
77	LEFT LOWER SWING ARM ASSEMBLY (INCLUDING FOUR-WHEEL ALIGNMENT)	2.1
78	RIGHT LOWER SWING ARM ASSEMBLY (INCLUDING FOUR-WHEEL ALIGNMENT)	2.1
79	RIGHT LOWER ARM BALL JOINT (INCLUDING FOUR-WHEEL POSITIONING)	2.1
80	LEFT LOWER ARM BALL JOINT (INCLUDING FOUR-WHEEL POSITIONING)	2.1
81	LEFT REAR SHOCK ABSORBER ASSEMBLY	0.7
82	LEFT REAR SHOCK ABSORBER DUST COVER	0.7
83	LEFT REAR SHOCK ABSORBER BUFFER BLOCK	0.7
84	LEFT REAR SHOCK ABSORBER DUST COVER	0.7
85	LEFT REAR SHOCK ABSORBER UPPER SUPPORT ASSEMBLY	0.7
86	RIGHT REAR SHOCK ABSORBER ASSEMBLY	0.7
87	RIGHT REAR SHOCK ABSORBER DUST COVER	0.7
88	RIGHT REAR SHOCK ABSORBER BUFFER BLOCK	0.7
89	DUST COVER OF RIGHT REAR SHOCK ABSORBER	0.7
90	RIGHT REAR SHOCK ABSORBER UPPER SUPPORT ASSEMBLY	0.7
91	TIRE (SINGLE WITH DYNAMIC BALANCE)	0.8
92	RIM(SINGLE WITH DYNAMIC BALANCE)	0.8
93	WHEEL TRIM COVER	0.3
94	VALVE_ASSY-TIRE	0.8
95	COVER_PLATE-SPARE_WHEEL_ASSY	0.2
96	ELECTRICAL POWER ASSISTED STEERING COLUMN ASSY WITH INTERMEDIATE SHAFT	1.5
97	INTERMEDIATE SHAFT ASSEMBLY	1.5
98	REPAIR KIT FOR KEY AND LOCK CYLINDER ASSEMBLY	0.5
99	KEY BLANK	0.2
100	REMOTE KEY	0.6

101	IGNITION SWITCH WITH LOCK CYLINDER ASSEMBLY	0.6
102	STEERING GEAR ASSEMBLY(INCLUDING FOUR-WHEEL ALIGNMENT)	4.1
103	STEERING ROD AND BALL JOINT (INCLUDING FOUR-WHEEL ALIGNMENT)	2.4
104	TIE ROD	3.2
105	GUIDE SLEEVE	0.3
106	STEERING DUST COVER	2.3
107	HEATSHIELD STEERING GEAR LHD-HEATSHIELD STEERING GEAR LHD	0.4
108	STEERING GEAR LEFT OUTER TIE ROD(INCLUDING FOUR WHEEL ALIGNMENT)	1.2
109	STEERING GEAR RIGHT OUTER TIE ROD(INCLUDING FOUR WHEEL ALIGNMENT)	1.2
110	FRONT BRAKE ASSY, LH	1.2
111	FRONT BRAKE ASSY, RH	1.2
112	STEERING KNUCKLE-LH	1.5
113	STEERING KNUCKLE-RH	1.5
114	CALIPER ASSY-LH FRT-SPT	1.1
115	CALIPER ASSY-RH FRT-SPT	1.1
116	FRONT DISC BRAKE PAD	0.4
117	LEFT FRONT BRAKE DISC	0.8
118	RIGHT FRONT BRAKE DISC	0.8
119	LEFT FRONT BRAKE CYLINDER ASSEMBLY	0.8
120	LEFT FRONT BRAKE CALIPER BRACKET SUB-ASSEMBLY (WITH GUIDE PIN)	0.5
121	LEFT FRONT WHEEL BRAKE COVER	1.3
122	FRONT BEARING UNIT	1.5
123	BEARING RETAINING RING	0.9
124	LEFT FRONT WHEEL HUB	1.3
125	RIGHT FRONT BRAKE CYLINDER ASSEMBLY	0.8
126	RIGHT FRONT BRAKE CALIPER BRACKET SUB-ASSEMBLY (WITH GUIDE PIN)	0.5
127	RIGHT FRONT WHEEL BRAKE COVER	1.3
128	RIGHT FRONT WHEEL HUB	1.3
129	REAR BRAKE ASSY, LH	0.6
130	REAR BRAKE ASSY, RH	0.6
131	REAR DISC BRAKE PAD	0.4
132	LEFT REAR BRAKE DISC	1.1
133	RIGHT REAR BRAKE DISC	1.1
134	LEFT REAR WHEEL HUB ASSEMBLY	0.9
135	RIGHT REAR WHEEL HUB ASSEMBLY	0.9
136	DUST COVER-LH LEFT REAR WHEEL BRAKE	0.8
137	DUST COVER-RIGHT REAR WHEEL BRAKE	0.8
138	LEFT REAR BRAKE CALIPER	0.8
139	RIGHT REAR BRAKE CALIPER	0.8
140	LEFT REAR BRAKE CALIPER BRACKET SUB-ASSEMBLY	0.5
141	LEFT REAR EPB UNIT ASSEMBLY	0.7
142	RIGHT REAR EPB UNIT ASSEMBLY	0.7
143	LEFT REAR WHEEL CYLINDER	0.5
144	RIGHT REAR WHEEL BRAKE CYLINDER	0.5
145	VACUUM PUMP ASSY-WITH MAIN CYLINDER	1.7
146	VACUUM BOOSTER	1.6
147	BRAKE MASTER CYLINDER ASSEMBLY	1
148	BRAKE OIL RESERVOIR ASSEMBLY	0.8
149	BRAKE FLUID RESERVOIR	0.2
150	VACUUM TUBE ASSEMBLY	0.3
151	VACUUM SENSOR	0.4

152	GASKET (VACUUM BOOSTER)	1.1
153	ESC CONTROL MODULE-ESC CONTROL MODULE	1.5
154	ESC MODULE BRACKET	1.5
155	ABS_SHOCK_ABSORPTION_UNDERLAY	2
156	LEFT FRONT WHEEL SPEED SENSOR	0.6
157	RIGHT FRONT WHEEL SPEED SENSOR	0.6
158	LEFT REAR WHEEL SPEED SENSOR	0.4
159	RIGHT REAR WHEEL SPEED SENSOR	0.4
160	LEFT FRONT HEIGHT SENSOR	0.4
161	LEFT REAR HEIGHT SENSOR	0.7
162	LEFT FRONT BRAKE HOSE	1
163	RIGHT FRONT BRAKE HOSE	1
164	RIGHT FRONT BRAKE PIPE	1.4
165	PIPE NO1 ASSY-LEFT REAR BRAKE LH	2.4
166	PIPE NO1 ASSY-RIGHT REAR BRAKE	1.4
167	BRAKE MASTER CYLINDER NO .1 BRAKE PIPE ASSEMBLY	1.4
168	BRAKE MASTER CYLINDER NO .2 BRAKE PIPE ASSEMBLY	1.4
169	LEFT FRONT BRAKE PIPE	1
170	LEFT REAR NO.2 BRAKE PIPE	1.7
171	RIGHT REAR NO.2 BRAKE PIPE	1.8
172	BRAKE PEDAL-BRAKE PEDAL	4.6
173	BRAKE LAMP SWITCH	0.3
174	PADEL_PAD	0.2
175	LEFT CONSTANT SPEED DRIVE SHAFT	1.8
176	RIGHT CONSTANT SPEED DRIVE SHAFT	1.8
177	OUTER CV JOINT KIT(LEFT)	1.3
178	LEFT INNER CV JOINT REPAIR KIT	1
179	REPAIR KIT INNER BALL CAGE RH	1
180	OUTER DUCT BOOT KIT(LEFT)	1
181	INNER DUST BOOT KIT(LEFT)	1
182	REAR AXLE ASSEMBLY	3.1
183	BRACKET-LEFT REAR SUSPENSION TRAILING ASSY LH	1
184	BRACKET-RIGHT REAR SUSPENSION TRAILING ASSY	1
185	COIL SPRING REAR SUSPENSION(LEFT)	1.1
186	FLOOR CARPET ASSEMBLY	4.3
187	WINDSHIELD ASSY-FRT	1.5
188	CORNER COVER-COWL PANEL LH	0.3
189	CORNER COVER-COWL PANEL RH	0.3
190	VENTILATION COVER PLATE LEFT FOAM BLOCK	0.2
191	VENTILATED COVER PLATE RIGHT FOAM BLOCK	0.3
192	VENTILATION COVER PLATE ASSY	0.6
193	LEFT TRIM PANEL OF VENTILATION COVER PLATE	0.2
194	VENTILATION COVER STRIP	0.4
195	RIGHT TRIM PANEL OF VENTILATION COVER PLATE	0.2
196	INSULATION-DASH PANEL INR	5.4
197	FRONT WALL OUTER SOUND INSULATION PAD ASSEMBLY	3.9
198	FRONT BUMPER ASSEMBLY	2.1
199	LEFT FRONT HEADLAMP MOUNTING BRACKET ASSEMBLY	1.4
200	RIGHT FRONT HEADLAMP MOUNTING BRACKET ASSEMBLY	1.4
201	RADIATOR FRAME MIDDLE BRACKET	1.5
202	ENGINE TRIM COVER	0.5

203	SHIELD-RH BODY LWR	0.3
204	SHIELD-LH BODY LWR	0.3
205	LEFT ENGINE GUARD	0.3
206	RIGHT ENGINE GUARD	0.3
207	ASSEMBLY-BONNET BODY (NOT INCLUDING PAINTING)	0.7
208	SEALING STRIP-ENGINE HOOD	0.3
209	LOCK ASSY-HOOD	0.3
210	ASSEMBLY-BONNET HINGE LH (NOT INCLUDING PAINTING)	0.8
211	ASSEMBLY-BONNET HINGE RH (NOT INCLUDING PAINTING)	0.8
212	CABLE-HOOD OPENING INR	1.2
213	HOOD SUPPORT ROD ASSEMBLY	0.3
214	INSULATION-ENGINE HOOD	0.3
215	HOOD LOCK SEAL BOX	0.3
216	LEFT FRONT FENDER(NOT INCLUDING PAINT)	1.5
217	RIGHT FRONT FENDER(NOT INCLUDING PAINT)	1.6
218	FRONT SPOILER OF LEFT FRONT WHEEL	0.2
219	FRONT SPOILER OF RIGHT FRONT WHEEL	0.2
220	LEFT FRONT FENDER MOUNTING BRACKET ASSEMBLY	1.2
221	RIGHT FRONT FENDER MOUNTING BRACKET ASSEMBLY	1.2
222	FORM-FENDER LH	0.2
223	FORM-FENDER RH	0.2
224	PLATE-FENDER LH	0.5
225	PLATE-FENDER RH	0.5
226	FENDER ASSEMBLY OF LEFT FRONT WHEEL HOUSING	0.5
227	FENDER ASSEMBLY OF RIGHT FRONT WHEEL HOUSING	0.5
228	RIGHT WING FENDER SIDE FRONT LOWER MOUNTING BRACKET ASSEMBLY	0.5
229	LEFT FENDER SIDE FRONT LOWER MOUNTING BRACKET ASSEMBLY	0.5
230	FRONT BUMPER UPPER TRIM STRIP LEFT MOUNTING BRACKET ASSEMBLY	0.5
231	FRONT BUMPER UPPER TRIM STRIP RIGHT MOUNTING BRACKET ASSEMBLY	0.5
232	LEFT REAR WHEEL HOUSING ASSEMBLY	0.5
233	RIGHT REAR WHEEL HOUSING ASSEMBLY	0.5
234	LEFT INNER WHEELHOUSE ACOUSTIC PAD IN LUGGAGE COMPARTMENT	1.2
235	SOUND INSULATION PAD FOR RIGHT INNER WHEEL HOUSING OF LUGGAGE COMPARTMENT	3.5
236	REAR BUMPER ASSEMBLY	1.1
237	INTELLIGENT BOOSTER-INTELLIGENT BOOSTER	1.3
238	WINDSHIELD ASSY-RR	1.8
239	BAGGAGE DOOR BODY ASSEMBLY(NOT INCLUDING PAINT)	1
240	LEFT BACK DOOR HINGE ASSEMBLY	0.4
241	RIGHT BACK DOOR HINGE ASSEMBLY	0.4
242	SEALING-TAILGATE	0.3
243	BAGGAGE DOOR GAS SPRING ASSEMBLY LH	0.3
244	BAGGAGE DOOR GAS SPRING ASSEMBLY RH	0.3
245	LOWER CONNECTOR OF BACK DOOR GAS SPRING	0.3
246	BACK DOOR CUSHION BLOCK	0.2
247	REAR LICENSE PLATE LAMP MOUNTING PLATE	0.2
248	RIGHT END CONNECTOR OF BACK DOOR GAS SPRING	0.2
249	PANEL ASSY-TAILGATE TRIM	0.9
250	BACK DOOR TRIM STRIP	0.3
251	BACK DOOR OPENING MECHANISM	0.3
252	LEFT END CONNECTOR OF BACK DOOR GAS SPRING	0.2

253	BACK DOOR LEFT DRIVE SUPPORT ROD ASSEMBLY	2.9
254	BACK DOOR RIGHT DRIVE SUPPORT ROD ASSEMBLY	2.9
255	LEFT END CONNECTOR OF ELECTRIC BRACE OF BACK DOOR	0.4
256	RIGHT END CONNECTOR OF BACK DOOR ELECTRIC STRUT	0.4
257	BACK DOOR LOCK BODY ASSEMBLY	0.3
258	PROTECTOR BUSH-TAILGATE LOCK	0.3
259	BAGGAGE DOOR LOCK CATCH ASSEMBLY	0.3
260	PANORAMIC ROOF FRAME ASSEMBLY	2.4
261	ROOF PANEL ASSEMBLY	3.1
262	ELECTRIC SUN BLIND	1.6
263	WIND SCREEN ASSY-SUNROOF	0.5
264	GLASS ASSY-SUNROOF FRT	0.9
265	GLASS ASSY-SUNROOF RR	1.1
266	SEALING STRIP-SUNROOF SOUND INSULATION	0.3
267	ROOF REAR GLASS ASSEMBLY SEALANT STRIP	1.1
268	SUNROOF BODY WEATHERSTRIP	3.1
269	SUNROOF RIGHT REAR DRAIN PIPE	2.8
270	MOTOR ASSY-SUNROOF SECONDARY	3
271	SUNROOF LEFT REAR DRAINAGE PIPE	2.8
272	HARNESS ASSY-SUNROOF	2.8
273	SUNSHADE CURTAIN ASSY,SUNROOF	4
274	OUTLET JOINT OF REAR WATER PIPE	1.1
275	SUNROOF FRONT DRAIN PIPE	1.1
276	MOTOR ASSY-SUNROOF MASTER	0.4
277	FRAME ASSY-SUNROOF	4.8
278	ASSEMBLY-FRONT DOOR BODY LH (NOT INCLUDING PAINTING)	1.3
279	ASSEMBLY-FRONT DOOR BODY RH (NOT INCLUDING PAINTING)	1.3
280	LEFT FRONT DOOR UNDERSIDE PANEL	0.3
281	RIGHT FRONT DOOR LOWER TRIM PANEL	0.3
282	WATER RETAINING FILM OF LEFT FRONT DOOR	0.4
283	RIGHT FRONT DOOR WATER SHIELD	0.3
284	DOOR CUSHION BLOCK	0.2
285	LOWER HINGE OF LEFT FRONT DOOR	0.3
286	LOWER HINGE OF RIGHT FRONT DOOR	0.3
287	LEFT FRONT DOOR STOPPER	0.4
288	RIGHT FRONT DOOR STOPPER	0.4
289	UPPER HINGE OF LEFT FRONT DOOR	0.3
290	UPPER HINGE OF RIGHT FRONT DOOR	0.3
291	INTERIOR FRONT UPPER DECORATIVE FILM OF LEFT FRONT DOOR WINDOW FRAME	0.2
292	LEFT FRONT DOOR WINDOW FRAME INNER MIDDLE DECORATIVE FILM	0.2
293	LEFT FRONT DOOR WINDOW FRAME INNER REAR DECORATIVE FILM	0.2
294	FRONT TRIM FILM,FRONT DOOR, LH	0.8
295	FRONT TRIM FILM,FRONT DOOR, RH	0.8
296	DOOR SEALING-FRT DOOR MOUNTED LH	0.8
297	DOOR SEALING-FRT DOOR MOUNTED RH	0.8
298	LEFT FRONT DOOR REAR DECORATIVE FILM	0.8
299	RIGHT FRONT DOOR REAR DECORATIVE FILM	0.8
300	RIGHT FRONT DOOR WINDOW FRAME INNER FRONT UPPER DECORATIVE FILM	0.2
301	RIGHT FRONT DOOR WINDOW FRAME INNER MIDDLE DECORATIVE FILM	0.2
302	RIGHT FRONT DOOR WINDOW FRAME INNER REAR DECORATIVE FILM	0.2
303	LEFT FRONT DOOR WINDOW FRAME TRIM STRIP ASSEMBLY	0.3

304	RIGHT FRONT DOOR WINDOW FRAME TRIM STRIP ASSEMBLY	0.3
305	LATCH-FRT SIDE DOOR LH	0.7
306	LATCH-FRT SIDE DOOR RH	0.7
307	LEVER-FRT SIDE LOCKING LH	0.6
308	RIGHT FRONT DOOR LOCK CYLINDER ROD	0.5
309	LEFT FRONT DOOR OUTER OPENING CABLE	0.5
310	RIGHT FRONT DOOR OUTER OPENING CABLE	0.5
311	LEFT FRONT DOOR LATCH	0.2
312	RIGHT FRONT DOOR LATCH	0.2
313	LEFT FRONT DOOR OUTSIDE HANDLE ASSEMBLY (ATMOSPHERE LAMP) (WITHOUT PAINTING)	0.6
314	RIGHT FRONT DOOR OUTSIDE HANDLE ASSEMBLY	0.6
315	INNER OPENING CABLE OF LEFT FRONT DOOR	0.5
316	RIGHT FRONT DOOR INNER OPENING CABLE	0.5
317	WINDOW ASSY-FRT SIDE DOOR LH	0.8
318	WINDOW ASSY-FRT SIDE DOOR RH	0.8
319	REAR GLASS GUIDE RAIL ASSY,FRONT DOOR, LH	0.6
320	REAR GLASS GUIDE RAIL ASSY,FRONT DOOR, RH	0.6
321	REGULATOR ASSY-FRT DOOR WINDOW LH	0.8
322	REGULATOR ASSY-FRT DOOR WINDOW RH	0.8
323	SEALING-FRT DOOR OTR WAIST RH	0.2
324	SEALING-FRT DOOR INR WAIST RH	0.3
325	SEALING-FRT DOOR OTR WAIST LH	0.2
326	SEALING-FRT DOOR INR WAIST LH	0.3
327	CHANNEL-LH FRT DOOR GLASS RUNNING	0.7
328	CHANNEL-RH FRT DOOR GLASS RUNNING	0.7
329	LEFT FRONT DOOR CORNER WINDOW GLASS ASSEMBLY	1.1
330	RIGHT FRONT DOOR CORNER WINDOW GLASS ASSEMBLY	1
331	FRONT DOOR GLASS INTERIOR SEAL LH	0.4
332	FRONT DOOR GLASS INTERIOR SEAL RH	0.4
333	LEFT FRONT DOOR GUIDE RAIL ASSEMBLY	0.9
334	RIGHT FRONT DOOR GUIDE RAIL ASSEMBLY	0.9
335	ASSEMBLY-REAR DOOR BODY LH(NOT INCLUDING PAINT)	1.2
336	ASSEMBLY-RIGHT REAR DOOR BODY(NOT INCLUDING PAINT)	1.2
337	LEFT REAR DOOR UNDER TRIM BOARD	0.2
338	RIGHT REAR DOOR LOWER TRIM PANEL	0.2
339	WATER RETAINING FILM OF LEFT REAR DOOR	0.2
340	WATER RETAINING FILM OF RIGHT REAR DOOR	0.2
341	UPPER HINGE OF LEFT REAR DOOR	0.3
342	UPPER HINGE OF RIGHT REAR DOOR	0.3
343	LOWER HINGE OF LEFT REAR DOOR	0.3
344	LOWER HINGE OF RIGHT REAR DOOR	0.3
345	LEFT REAR DOOR STOPPER	0.4
346	RIGHT REAR DOOR STOPPER	0.4
347	FRONT DECORATIVE FILM OF LEFT REAR DOOR	0.8
348	LEFT REAR DOOR WINDOW FRAME INNER MIDDLE DECORATIVE FILM	0.2
349	LEFT REAR DOOR MIDDLE DECORATIVE FILM	0.8
350	INTERIOR FRONT DECORATIVE FILM OF LEFT REAR DOOR	0.2
351	LEFT REAR DOOR WINDOW FRAME INNER REAR DECORATIVE FILM	0.2
352	REAR DECORATIVE FILM,LEFT REAR DOOR	0.8
353	DOOR SEALING-LEFT REAR DOOR MOUNTED	0.8

354	DOOR SEALING-RIGHT REAR DOOR MOUNTED	0.8
355	FRONT DECORATIVE FILM OF RIGHT REAR DOOR	0.8
356	RIGHT REAR DOOR MIDDLE DECORATIVE FILM	0.8
357	DECORATIVE FILM, RIGHT REAR DOOR	0.8
358	INTERIOR FRONT DECORATIVE FILM OF RIGHT REAR DOOR WINDOW FRAME	0.2
359	RIGHT REAR DOOR WINDOW FRAME INNER MIDDLE DECORATIVE FILM	0.2
360	RIGHT REAR DOOR WINDOW FRAME INNER REAR DECORATIVE FILM	0.2
361	WATERPROOF MEMBRANE OF LEFT REAR DOOR	0.5
362	WATERPROOF MEMBRANE OF RIGHT REAR DOOR	0.5
363	LEFT REAR DOOR WINDOW FRAME TRIM STRIP ASSEMBLY	0.3
364	RIGHT REAR DOOR WINDOW FRAME TRIM STRIP ASSEMBLY	0.3
365	LATCH-LEFT REAR SIDE DOOR	0.7
366	LATCH-RIGHT REAR SIDE DOOR	0.7
367	LEFT REAR DOOR OUTER OPENING CABLE	0.6
368	LEFT REAR DOOR INNER RELEASE CABLE	0.6
369	LEFT REAR DOOR LATCH	0.2
370	RIGHT REAR DOOR LATCH	0.2
371	RIGHT REAR DOOR OUTER OPENING CABLE	0.6
372	RIGHT REAR DOOR INNER RELEASE CABLE	0.6
373	HANDLE ASSY-LEFT REAR SIDE DOOR OTR OPENING(ATMOSPHERE LAMP) (EXCLUDING PAINTING)	0.7
374	HANDLE ASSY-RIGHT REAR SIDE DOOR OTR OPENING(ATMOSPHERE LAMP) (EXCLUDING PAINTING)	0.7
375	WINDOW ASSY-LEFT REAR SIDE DOOR	0.7
376	WINDOW ASSY-RIGHT REAR SIDE DOOR	0.7
377	REAR GUIDE RAIL ASSEMBLY OF LEFT REAR DOOR GLASS	0.9
378	REAR GUIDE RAIL ASSEMBLY OF RIGHT REAR DOOR GLASS	0.9
379	REGULATOR ASSY-LEFT REAR DOOR WINDOW	0.8
380	REGULATOR ASSY-RIGHT REAR DOOR WINDOW	0.8
381	WINDOW-LEFT REAR SIDE QUARTER	0.7
382	WINDOW-RIGHT REAR SIDE QUARTER	0.7
383	SEALING-LEFT REAR DOOR OTR WAIST	0.2
384	SEALING-RIGHT REAR DOOR OTR WAIST	0.2
385	SEALING-RIGHT REAR DOOR INR WAIST	0.3
386	SEALING-LEFT REAR DOOR INR WAIST	0.3
387	CHANNEL-LEFT REAR DOOR GLASS RUNNING	0.7
388	CHANNEL-RIGHT REAR DOOR GLASS RUNNING	0.7
389	AC CHARGING PORT COVER PLATE	0.2
390	LID SUB ASSY-POWER CHARGING	0.3
391	CHARGING CAP DRAIN PIPE	0.4
392	DC CHARGING PORT COVER PLATE	0.2
393	BATTERY ASSY-POWER	3.5
394	POWER BATTERY SENSOR	4.2
395	POWER BATTERY CORE	8
396	UPPER MODULE	5.2
397	LOWER MODULE	7.9
398	POWER BATTERY UPPER SHELL	4.8
399	SEALING STRIP,FRONT FIXING PLATE	4.2
400	FRONT SEALING PRESS PLATE	4.7
401	TOP COVER SEAL	5.6
402	INLET SUB ASSY	5.3

403	OUTLET SUB ASSY	5.3
404	LOWER TRAY	11.8
405	MOUNTING BRACKET	3.5
406	ANTI-EXPLOSION VALVE	4.6
407	DISCHARGE HIGH VOLTAGE CONNECTOR (CONNECTOR)	4.9
408	FUSE	4.6
409	ECU MODULE-BATTERY ENERGY CONTROL (BMS)	4.9
410	HIGH PRESSURE CONTROL BOX ASSEMBLY (BDU)	5.5
411	CSU	4.8
412	RIGHT FRONT WATER PIPE ASSEMBLT	5
413	LEFT FRONT WATER PIPE ASSEMBLT	7.5
414	MODULE LIQUID COOLED PLATE	6.4
415	WIRING HARNES-LOW VOLTAGE	7.5
416	FRONT BUMPER	0.9
417	UPPER PART,FRONT BUMPER(RADAR)	1.5
418	FRONT BUMPER LEFT MOUNTING	0.9
419	FRONT BUMPER RIGHT MOUNTING BRACKET	0.9
420	FRONT BUMPER LEFT AIR DEFLECTOR	1.2
421	FRONT BUMPER RIGHT AIR DEFLECTOR	1.2
422	UPPER TRIM PLATE,LEFT FENDER	0.2
423	UPPER TRIM PLATE,RIGHT FENDER	0.2
424	ENGINE COMPARTMENT TRIM PANEL	0.2
425	FRONT BUMPER MIDDLE BRACKET	0.9
426	ABSORBER-FRT BUMPER ENERGY	0.9
427	FRONT BUMPER TRIM PANEL MOUNTING BASE	2.1
428	FRONT BUMPER TRIM PANEL	0.3
429	FRONT BUMPER LEFT TRIM STRIP	1.2
430	FRONT BUMPER RIGHT TRIM STRIP	2
431	RADIATOR GRILLE GRID	1
432	FRONT BUMPER LOWER GRILLE ASSEMBLY	1
433	FRONT BUMPER MIDDLE TRIM PANEL	1
434	FRONT BUMPER LEFT LOWER TRIM FRAME	2.1
435	FRONT BUMPER RIGHT LOWER TRIM FRAME	1
436	FRONT BUMPER LOWER BODY LEFT GRILLE	0.2
437	LOWER PART,FRONT BUMPER(ASSEMBLE)	2.1
438	FRONT BUMPER LOWER BODY RIGHT GRILLE	1
439	PLATE-FRT LICENSE MOUNTING	0.9
440	ACC COVER	1
441	PEDESTRIAN LEG PROTECTION BRACKET	1
442	FRONT TOWING HOOK COVER	0.2
443	RADIATOR GRILLE	0.5
444	FRONT LOGO	0.2
445	LEFT SUNVISOR ASSEMBLY(SKYLIGHT VERSION)	0.3
446	RIGHT SUNVISOR ASSEMBLY(SKYLIGHT VERSION)	0.3
447	LEFT SUNSHADE HOOK	0.2
448	RIGHT SUNSHADE HOOK	0.2
449	FRONT MONOCULAR CAMERA FRONT COVER	0.2
450	FRONT MONOCULAR CAMERA REAR COVER	0.2
451	REARVIEW MIRROR ASSY-INR VIEW	0.3
452	LEFT EXTERIOR REAR VIEW MIRROR ASSEMBLY	0.4
453	LEFT OUTER REARVIEW MIRROR LENS ASSEMBLY	0.5

454	RIGHT EXTERIOR REAR VIEW MIRROR ASSEMBLY	0.4
455	REARVIEW MIRROR LENS ASSEMBLY RH	0.3
456	MOTOR AND LINKAGE-WINDOW WIPER	0.5
457	LEFT FRONT WIPER ARM ASSEMBLY	0.2
458	WIPER BLADE ASSEMBLY	0.2
459	RIGHT FRONT WIPER ARM ASSEMBLY	0.2
460	REAR WIPER MOTOR ASSY	0.3
461	REAR WIPER ARM ASSY	0.2
462	WATER RESERVOIR & WASHER MOTOR ASSY	0.6
463	WASHER MOTOR	0.5
464	REAR WASHING HOSE	1.4
465	HOSE BEFORE WASHING	1.4
466	DRAFT TUBE	0.2
467	DRAFT TUBE SUPPORT	0.3
468	LID OF WASHING POT	0.2
469	FRONT WASHER HOSE ASSEMBLY	0.3
470	FRONT WASHER LEFT NOZZLE ASSEMBLY	0.2
471	FRONT SCRUBBER RIGHT NOZZLE ASSEMBLY	0.2
472	FRONT WASHER REAR HOSE ASSEMBLY	0.4
473	REAR SCRUBBER NOZZLE ASSEMBLY	0.4
474	I/P BODY ASSY-I/P BODY ASSY	5.1
475	AIR OUTLET DECORATIVE PANEL AT THE TOP OF INSTRUMENT PANEL	0.2
476	FRONT END FLANNEL STRIP OF INSTRUMENT PANEL	2.8
477	DRIVER SIDE END COVER OF INSTRUMENT PANEL	0.2
478	FRONT PASSENGER SIDE END COVER OF INSTRUMENT PANEL	0.2
479	TRIM PANEL LEFT SIDE TRIM	2.9
480	TRIM PANEL RIGHT SIDE TRIM STRIP	2.9
481	AC PANEL FIXING BRACKET	0.4
482	TRIM PANEL MIDDLE TRIM STRIP	2.9
483	DVD COVER DECORATIVE TABLE	0.2
484	INSTRUMENT PANEL RIGHT TRIM PANEL	0.4
485	INSTRUMENT PANEL LEFT TRIM PANEL	0.3
486	ATMOSPHERE LAMP OF INSTRUMENT PANEL	1.2
487	INSTRUMENT PANEL TRIM PANEL ASSEMBLY	2.8
488	INSTRUMENT PANEL HANDLE OUTER COVER	2.9
489	INSTRUMENT PANEL HANDLE MOUNTING BRACKET	2.8
490	RIGHT LOWER BAFFLE OF INSTRUMENT PANEL	0.2
491	LOWER BODY FRAMEWORK OF INSTRUMENT PANEL	1.3
492	LH STORAGE BOX ASSY-LH STORAGE BOX ASSY	0.2
493	HANDLE ASSY-ENGINE HOOD LOCK	0.5
494	SHIELD PLATE ASSY-LH LWR I/P	0.5
495	DIAGNOSTIC INTERFACE MOUNTING BRACKET	0.5
496	STEERING COLUMN LOWER SHIELD	0.3
497	UPPER SHIELD OF STEERING COLUMN	0.3
498	STEERING COLUMN UPPER COVER CURTAIN ASSEMBLY	0.6
499	INSTRUMENT CLUSTER TRIM COVER	0.2
500	INSTRUMENT PANEL BEAM ASSEMBLY	3.4
501	LOWER RIGHT MOUNTING BRACKET FOR MIDDLE CHANNEL OF INSTRUMENT PANEL	0.6
502	LOWER LEFT MOUNTING BRACKET FOR MIDDLE CHANNEL OF INSTRUMENT PANEL	0.6
503	COVER ASSY-GLOVE BOX	0.2
504	GLOVE BOX BODY ASSEMBLY	0.3

505	DAMPENER-I/P COMPARTMENT	0.3
506	INSULATOR-I/P COMPARTMENT	0.2
507	LOCK COVER-I/P COMPARTMENT RH	0.2
508	LOCK COVER-I/P COMPARTMENT LH	0.2
509	STOPPER-I/P COMPARTMENT	0.2
510	INSTRUMENT PANEL CENTER LEFT AIR OUTLET ASSEMBLY	0.5
511	INSTRUMENT PANEL CENTER RIGHT AIR OUTLET ASSEMBLY	0.5
512	DUCT ASSY-FRT FLOOR CONSOLE RR AIR OUTLET	0.6
513	CONSOLE PANEL ASSY	0.7
514	FRONT LOWER RUBBER PAD OF AUXILIARY INSTRUMENT PANEL	0.2
515	FRONT USB BRACKET ASSEMBLY	0.6
516	RUBBER PAD-FRT FLOOR CONSOLE FRT UPR	0.2
517	MIDDLE TRIM PANEL OF AUXILIARY INSTRUMENT PANEL	0.6
518	ARMREST BOX COVER ASSY,CONSOLE PANEL	0.9
519	LEFT FRONT BAFFLE OF AUXILIARY INSTRUMENT PANEL	0.2
520	RIGHT FRONT BAFFLE OF AUXILIARY INSTRUMENT PANEL	0.2
521	PANEL ASSY- SHIFT SELECTOR	0.4
522	CUP HOLDER RUBBER PAD	0.1
523	RIGHT SIDE TRIM PANEL OF AUXILIARY INSTRUMENT PANEL	0.6
524	LEFT SIDE TRIM PANEL BODY OF AUXILIARY INSTRUMENT PANEL	0.6
525	AUXILIARY INSTRUMENT PANEL ARMREST BOX PAD	0.2
526	REAR USB COVER	0.2
527	USB TRIM	0.2
528	PANEL ASSY-FRT FLOOR CONSOLE RR	0.2
529	MIDDLE MOUNTING BRACKET OF AUXILIARY INSTRUMENT PANEL	1.1
530	REAR BUMPER	1.1
531	REAR BUMPER UPR BODY	1.2
532	BRACKET-RR BUMPER MOUNTING LH	0.9
533	BRACKET-RR BUMPER MOUNTING RH	0.9
534	REAR BUMPER LOWER MOUNTING BRACKET	1.1
535	REAR BUMPER LEFT LOWER MOUNTING BRACKET	1.1
536	REAR BUMPER LOWER RIGHT MOUNTING BRACKET	1.1
537	REAR BUMPER LEFT UPPER TRIM PLUG	0.2
538	REAR BUMPER LOWER BODY ASSEMBLY	1.5
539	LEFT LOWER TRIM FRAME OF REAR BUMPER	1.2
540	MIDDLE AND LOWER TRIM FRAME OF REAR BUMPER	1.2
541	RIGHT LOWER TRIM FRAME OF REAR BUMPER	1.2
542	CAP-RR TOW HOOK(NOT INCLUDING PAINT)	0.2
543	REAR BUMPER LEFT TRIM PANEL	1.2
544	REAR BUMPER RIGHT TRIM PANEL	1.2
545	REAR BUMPER LEFT TRIM PANEL MOUNTING BASE	1.2
546	REAR BUMPER RIGHT TRIM PANEL MOUNTING BASE	1.2
547	INTERIOR TRIM PANEL ASSEMBLY OF LEFT FRONT DOOR	0.4
548	RIGHT FRONT DOOR INTERIOR TRIM PANEL ASSEMBLY	0.4
549	LEFT FRONT DOOR INTERIOR HANDLE OUTER COVER ASSEMBLY	0.2
550	INNER COVER ASSEMBLY OF INTERIOR HANDLE OF LEFT FRONT DOOR	0.2
551	RIGHT FRONT DOOR INTERIOR HANDLE INNER COVER ASSEMBLY	0.2
552	RIGHT FRONT DOOR INTERIOR HANDLE OUTER COVER ASSEMBLY	0.2
553	PANEL ASSY-LH FRT SIDE DOOR QUARTER WINDOW	0.2
554	PANEL ASSY-RH FRT SIDE DOOR QUARTER WINDOW	0.2
555	LEFT FRONT DOOR HANDLE BOX BRACKET	0.4

556	RIGHT FRONT DOOR HANDLE BOX BRACKET	0.4
557	RUBBER PAD OF LEFT FRONT DOOR HANDLE BOX	0.2
558	RUBBER PAD OF RIGHT FRONT DOOR HANDLE BOX	0.2
559	CORNER TRIM COVER,FRONT DOOR WINDOW, LH	0.3
560	CORNER TRIM COVER,FRONT DOOR WINDOW, RH	0.3
561	INTERIOR TRIM PANEL ASSEMBLY OF LEFT REAR DOOR	0.4
562	INTERIOR TRIM PANEL ASSEMBLY OF RIGHT REAR DOOR	0.4
563	LEFT REAR DOOR INTERIOR HANDLE OUTER COVER ASSEMBLY	0.2
564	LEFT REAR DOOR INTERIOR HANDLE INNER COVER ASSEMBLY	0.2
565	RIGHT REAR DOOR INTERIOR HANDLE INNER COVER ASSEMBLY	0.2
566	RIGHT REAR DOOR INNER TRIM HANDLE OUTER COVER ASSEMBLY	0.2
567	RIGHT FRONT SIDE DOOR INNER HANDLE PLUG COVER	0.2
568	RIGHT REAR SIDE DOOR INNER HANDLE PLUG COVER	0.2
569	LEFT FRONT SIDE DOOR INNER HANDLE PLUG COVER	0.2
570	LEFT REAR SIDE DOOR INNER HANDLE PLUG COVER	0.2
571	LEFT REAR DOOR WINDOW FRAME B-PILLAR CORNER TRIM	0.2
572	LEFT REAR DOOR WINDOW FRAME C-PILLAR CORNER TRIM	0.2
573	RIGHT REAR DOOR WINDOW FRAME B-PILLAR CORNER TRIM	0.2
574	RIGHT REAR DOOR WINDOW FRAME C-PILLAR CORNER TRIM	0.2
575	LEFT REAR DOOR HANDLE BOX BRACKET	0.5
576	RIGHT REAR DOOR HANDLE BOX BRACKET	0.5
577	RUBBER PAD OF LEFT REAR DOOR HANDLE BOX	0.2
578	RUBBER PAD OF RIGHT REAR DOOR HANDLE BOX	0.2
579	CORNER TRIM COVER,REAR DOOR, LH	0.3
580	CORNER TRIM COVER,REAR DOOR, RH	0.3
581	PANEL ASSY-TAILGATE LH UPR TRIM	0.3
582	PANEL ASSY-TAILGATE RH UPR TRIM	0.3
583	PANEL ASSY-TAILGATE LWR TRIM	0.4
584	PANEL ASSY-TAILGATE MID UPR TRIM	0.2
585	ACCESS COVER-LEFT REAR TAIL LAMP	0.2
586	ACCESS COVER-RIGHT REAR TAIL LAMP	0.2
587	ACCESS COVER-RIGHT REAR TAIL LAMP(INTERIOR PANEL UNDER BACK DOOR)	0.2
588	ACCESS COVER-LEFT REAR TAIL LAMP(AT THE INTERIOR TRIM PANEL UNDER THE BACK DOOR)	0.2
589	LUGGAGE COMPARTMENT HOOK	0.3
590	COVER-TAILGATE FIRST AID	0.2
591	BACK DOOR HANDLE BOX MODULE	0.2
592	DECORATIVE PLATE ASSEMBLY ON LEFT PILLAR A	0.4
593	PANEL-LH A PILLAR LOWER	0.2
594	TRIM PLATE ASSEMBLY ON RIGHT A PILLAR	0.4
595	PANEL-RH A PILLAR LOWER	0.2
596	LH DOORSILL MOULDING FRT-LH DOORSILL MOULDING FRT	0.2
597	ASSY,RIGHT FRONT DOORSILL TRIM	0.2
598	RIGHT FRONT WELCOME PEDAL ASSEMBLY	0.2
599	LEFT FRONT WELCOME PEDAL ASSEMBLY	0.2
600	PANEL-LH B PILLAR LOWER	0.3
601	TRIM PLATE ASSEMBLY ON RIGHT B PILLAR	0.4
602	LEFT B PILLAR TOP TRIM PLATE ASSEMBLY	0.4
603	PANEL-RH B PILLAR LOWER	0.3
604	TRIM PLATE ASSEMBLY ON RIGHT C PILLAR	0.6
605	LEFT C PILLAR UPPER TRIM PLATE ASSEMBLY	0.6

606	LEFT B-PILLAR COAT HOOK	0.4
607	RIGHT B-PILLAR COAT HOOK	0.4
608	LEFT C-PILLAR LOWER SUPPORT FRAME	1.2
609	RIGHT C-PILLAR LOWER SUPPORT FRAME	0.5
610	LEFT REAR WELCOME PEDAL ASSEMBLY	0.2
611	RIGHT REAR WELCOME PEDAL ASSEMBLY	0.2
612	LEFT REAR DOORSILL MOULDING RR-LH DOORSILL MOULDING	0.3
613	ASSY, RIGHT REAR DOORSILL PEDAL	0.3
614	PANEL-LH C PILLAR LOWER	0.3
615	PANEL-RH C PILLAR LOWER	0.3
616	BRACKET-LH C PILLAR UPR TRIM PANEL MOUNTING	0.7
617	BRACKET-RH C PILLAR UPR TRIM PANEL MOUNTING	0.6
618	CEILING ASSEMBLY	2.7
619	RIGHT REAR SAFETY HANDLE	0.2
620	LEFT REAR SAFETY HANDLE	0.2
621	LEFT FRONT SAFETY HANDLE ASSEMBLY	0.2
622	RIGHT FRONT SAFETY HANDLE ASSEMBLY	0.2
623	LEFT TRIM PANEL BODY OF LUGGAGE COMPARTMENT	0.6
624	RIGHT TRIM PANEL BODY OF LUGGAGE COMPARTMENT	0.5
625	LEFT C-PILLAR MIDDLE TRIM PANEL	0.6
626	RIGHT C-PILLAR MIDDLE TRIM PANEL	0.5
627	LOWER LEFT REAR POST TRIM PANEL	0.6
628	RIGHT REAR POST LOWER TRIM PANEL	0.5
629	LUGGAGE COMPARTMENT LEFT ROPE HOOK	0.2
630	LUGGAGE COMPARTMENT RIGHT ROPE HOOK	0.2
631	LUGGAGE COMPARTMENT LATCH COVER	0.2
632	TRUNK DOOR SILL TRIM PANEL ASSEMBLY	0.2
633	SOUND ABSORBING COTTON FOR SPARE TIRE IN LUGGAGE COMPARTMENT	0.8
634	LEFT CUSHION BLOCK OF LUGGAGE COMPARTMENT	0.5
635	RIGHT CUSHION BLOCK OF LUGGAGE COMPARTMENT	0.5
636	SPARE TIRE COVER IN LUGGAGE COMPARTMENT	0.2
637	PANEL ASSY-LUGGAGE LH UPR TRIM(SURROUND SPEAKER)	0.5
638	PANEL ASSY-LUGGAGE RH UPR TRIM(SURROUND SPEAKER)	0.5
639	COVER-TRUNK(TRUNK COVER PLATE)	0.3
640	LEFT END COVER OF LUGGAGE COMPARTMENT	0.2
641	TRUNK PARTITION	0.3
642	PANEL ASSY-REAR END INR TRIM	0.2
643	INTERIOR TRIM PLATE ASSY,REAR DOOR, LH	0.3
644	INTERIOR TRIM PLATE ASSY,REAR DOOR, RH	0.3
645	TRUNK BLINDS	0.2
646	LEFT REAR WALL PRESSURE RELIEF VALVE ASSEMBLY	1.1
647	RIGHT REAR WALL PRESSURE RELIEF VALVE ASSEMBLY	1.1
648	LEFT LUGGAGE RACK ASSEMBLY	2.9
649	RIGHT LUGGAGE RACK ASSEMBLY	2.9
650	BACK DOOR SPOILER ASSEMBLY	0.6
651	LEFT D-PILLAR OUTER TRIM PANEL ASSEMBLY	0.2
652	RIGHT D-PILLAR OUTER TRIM PANEL ASSEMBLY	0.2
653	MOULDING-LEFT REAR SIDE DOOR C PILLAR	0.4
654	MOULDING-RIGHT REAR SIDE DOOR C PILLAR RH	0.4
655	LEFT REAR WHEEL EYEBROW ASSEMBLY	0.4
656	RIGHT REAR WHEEL EYEBROW ASSEMBLY	0.4

657	FRONT PART OF LEFT REAR WHEEL EYEBROW	0.3
658	FRONT SECTION OF RIGHT REAR WHEEL EYEBROW	0.3
659	MOUNTING BRACKET OF FRONT PART OF LEFT REAR WHEEL EYEBROW	0.4
660	FRONT SECTION MOUNTING BRACKET OF RIGHT REAR WHEEL EYEBROW	0.4
661	LEFT REAR DOOR WHEEL COVER WEATHERSTRIP	0.2
662	RIGHT REAR DOOR WHEEL ARCH SEAL	0.2
663	LEFT SKIRT ASSEMBLY	0.4
664	RIGHT SKIRT ASSEMBLY	0.4
665	DOOR SEALING-FRT BODY MOUNTED LH	0.3
666	DOOR SEALING-LEFT REAR BODY MOUNTED	0.3
667	DOOR SEALING-FRT BODY MOUNTED RH	0.3
668	DOOR SEALING-RIGHT REAR BODY MOUNTED	0.3
669	LEFT FRONT WHEEL EYEBROW ASSEMBLY	0.3
670	RIGHT FRONT WHEEL EYEBROW ASSEMBLY	0.3
671	LEFT A-PILLAR OUTER TRIM PANEL	0.3
672	RIGHT A-PILLAR OUTER TRIM PANEL	0.3
673	DRIVER SEAT ASSEMBLY	0.6
674	LEFT FRONT SEAT BACK FOAM AND COVER ASSEMBLY	0.8
675	LEFT FRONT SEAT CUSHION FOAM AND SURFACE SLEEVE ASSEMBLY	0.7
676	FRONT HEADREST GUIDE SLEEVE	0.2
677	FRONT SEAT HEADREST	0.2
678	FRONT HEADREST LOCKING GUIDE SLEEVE ASSEMBLY	0.2
679	LEFT FRONT SEAT OUTER SHIELD ASSEMBLY	0.5
680	LEFT FRONT SEAT INNER COVER	0.4
681	LEFT FRONT SEAT ADJUSTMENT BUTTON (FORWARD AND BACKWARD)	0.2
682	LEFT FRONT SEAT ADJUSTMENT BUTTON (BACKREST ADJUST)	0.2
683	LEFT SEAT ADJUSTMENT SWITCH	0.5
684	SEAT HEATING TEMPERATURE CONTROL MODULE	0.4
685	FRONT SEAT ASSEMBLY RH	0.4
686	RIGHT FRONT SEAT BACK FOAM AND COVER ASSEMBLY	0.7
687	RIGHT FRONT SEAT CUSHION FOAM AND SURFACE SLEEVE ASSEMBLY	0.7
688	RIGHT FRONT SEAT INNER SHIELD ASSEMBLY	0.4
689	SBR ASSEMBLY	0.4
690	RIGHT FRONT SEAT OUTER SHIELD ASSEMBLY	0.5
691	RIGHT FRONT SEAT ADJUSTMENT BUTTON (FORWARD AND BACKWARD)	0.2
692	RIGHT FRONT SEAT ADJUSTMENT BUTTON (BACKREST ADJUST)	0.2
693	RIGHT SEAT ADJUSTMENT SWITCH	0.5
694	BACK RIGHT BACKREST	0.3
695	BACK LEFT BACKREST	0.3
696	REAR HEADREST GUIDE SLEEVE	0.2
697	REAR SEAT HEADREST ASSEMBLY	0.2
698	MIDDLE HEADREST ASSEMBLY	0.2
699	SEAT BELT EXIT COVER	0.2
700	REAR SEAT HANDLE ASSEMBLY	0.2
701	REAR ISOFIX UPPER FIXED POINT TRIM COVER	0.2
702	COVER FOR BACKREST LOCK	0.2
703	REAR CUSHION bayonet	0.3
704	REAR BACKREST MIDDLE MOUNTING BRACKET COVER	0.2
705	REAR BACKREST MIDDLE MOUNTING BRACKET	0.5
706	BACK SEAT CUSHION	0.2
707	ARMREST BRACKET OUTER SHIELD	0.3

708	CUP HOLDER BOTTOM PAD	0.2
709	CENTER ARMREST ASSEMBLY	0.2
710	WIRING HARNESS ASSY-ENGINE	2
711	ENGINE WIRE HARNESS BRACKET	0.6
712	TRANSMISSION GROUND HARNESS	1
713	TRANSMISSION WIRING HARNESS BRACKET	0.5
714	HARNESS ASSY-POWER WIRING	1.2
715	DCDC BOND STRAP	1.5
716	GROUND WIRE HARNESS, BATTERY CHARGER	1.4
717	HARNESS-ENGINE GROUND	1.4
718	HARNESS-HIGH VOLTAGE BATTERY PACKAGE GROUND	1.4
719	HARNESS-PTC GROUND	1.4
720	WIRE HARNESS,ENGINE COMPARTMENT	5.2
721	ENGINE ROOM HARNESS BRACKET	0.5
722	FRONT BUMPER WIRING HARNESS	1.2
723	POWER SOCKET WIRE HARNESS ASSY	1.3
724	BSG ADAPTER HARNESS	1.5
725	JUNCTION BOX ASSEMBLY	0.8
726	BSG HARNESS MOUNTING BRACKET (FRONT)	2
727	AC CHARGING SOCKET COVER ASSY	0.2
728	WIRING HARNESS-DC-POWER ASSY	2.1
729	ASSY,MOTOR COMPRESSOR WIRE HARNESS	0.6
730	DC CHARGING SOCKET HARNESS ASSY	1.6
731	DC CHARGING SOCKET COVER ASSY	0.2
732	HIGH VOLTAGE WIRE HARNESS HOLDER	0.9
733	WIRING HARNESS-IP	7.1
734	AIR CONDITIONING HOST ASSEMBLY HARNESS	7.7
735	WIRING HARNESS-BODY	4.5
736	WIRING HARNESS-ROOF	1.6
737	INDOOR LAMP HARNESS ASSEMBLY	1.7
738	CABLE-DOORS DMOD LH FRT	0.9
739	CABLE-DOORS DMOD RH FRT	0.9
740	CABLE-LEFT REAR DOORS DMOD	0.9
741	CABLE-RIGHT REAR DOORS DMOD	0.9
742	THE TAIL GATE WIRING HARNESS(RIGHT)	0.7
743	REVERSING RADAR HARNESS	0.8
744	HARNESS-BUMPER RR DMOD	0.8
745	ABS WIRE HARNESS	0.9
746	LEFT EPB CALIPER MOTOR HARNESS	1
747	LEFT EPB CALIPER MOTOR HARNESS BRACKET	1
748	RIGHT EPB CALIPER MOTOR HARNESS	1
749	RIGHT EPB CALIPER MOTOR HARNESS BRACKET	1
750	COMBINE INSTRUMENT-COMBINE INSTRUMENT	0.4
751	HEAD UP DISPLAY	4.3
752	STALK MODULE-STALK MODULE	0.7
753	STEERING WHEEL ANGLE SENSOR	0.7
754	CLOCK SPRING	0.5
755	GL_BOX_LAMP_SWITCH	0.3
756	SWITCH PANEL-RCSM	0.4
757	LEFT FRONT DOOR WINDOW ELEVATOR SWITCH PANEL	0.3
758	RIGHT FRONT DOOR WINDOW ELEVATOR SWITCH PANEL	0.3

759	LEFT REAR DOOR GLASS REGULATOR SWITCH PANEL	0.3
760	RIGHT REAR DOOR GLASS REGULATOR SWITCH PANEL	0.3
761	CONTROL UNIT-ELECTRIC WINDOW LH FRT	0.3
762	RIGHT FRONT ELECTRIC WINDOW LIFTING SWITCH	0.5
763	LEFT REAR ELECTRIC WINDOW LIFTING SWITCH	0.5
764	RIGHT REAR ELECTRIC WINDOW LIFTING SWITCH	0.5
765	ELECTRIC UNIT -STOP/START	0.4
766	PARKING SWITCH PACK	0.3
767	AUTOHOLD AND HILL DESCENT SWITCH ASSEMBLY	0.3
768	ELECTRICAL UNIT-LUGGAGE	0.4
769	DRIVING MODE SWITCH	0.6
770	EPB CONTROL SWITCH	0.6
771	SWITCH-SIDE DOOR OUTSIDE RR VIEW MIRROR	0.3
772	WIRELESS CHARGER	0.4
773	FRONT STANDBY POWER INTERFACE	0.3
774	BACKUP POWER INTERFACE	0.3
775	SWITCH GROUP-CONSOLE	0.3
776	AIR CONDITIONING CONTROL SWITCH	2
777	ENTERTAINMENT DISPLAY POWER SWITCH	0.4
778	ELECTRICAL UNIT-SBSM	0.3
779	BATTERY ASSY.(H5)	0.3
780	BATTERY NEGATIVE CABLE	0.3
781	TRAY-BATTERY	0.4
782	BATTERY MOUNTING BRACKET ASSEMBLY	0.5
783	PLATE-BATTERY	0.3
784	BATTERY POSITIVE WIRE HARNESS BRACKET	0.3
785	CAP-BATTERY TEXTILE	0.2
786	LEFT FRONT COMBINATION LAMP	1
787	RIGHT FRONT COMBINATION LAMP	1
788	LEFT FRONT COMBINATION LAMP MOUNTING BRACKET	1.1
789	RIGHT FRONT COMBINATION LAMP MOUNTING BRACKET	1.1
790	LEFT DAYTIME DRIVING LIGHT	1
791	RIGHT DAYTIME RUNNING LIGHT	1
792	LEFT REAR RETRO REFLECTOR	0.9
793	RIGHT REAR RETRO REFLECTOR	0.9
794	LEFT REAR FOG LAMP	0.9
795	FRONT FOG LAMP ASSEMBLY RH	1.4
796	FRONT FOG LAMP ASSEMBLY LH	1.4
797	RIGHT REAR FOG LAMP	0.9
798	LEFT REAR COMBINATION LIGHT ASSEMBLY(BACK DOOR)	0.3
799	RIGHT REAR COMBINATION LAMP ASSEMBLY (BACK DOOR)	0.3
800	LEFT REAR COMBINATION LAMP ASSEMBLY (SIDE WALL)	0.3
801	RIGHT REAR COMBINATION LAMP ASSEMBLY (SIDE WALL)	0.3
802	GLOVEBOX_LAMP_ASSY	0.2
803	FOOTLIGHT	0.4
804	HIGH BRAKE LAMP	0.4
805	FRONT ROOF LAMP ASSY	0.3
806	REAR ROOF LAMP ASSY(LED)	0.3
807	TRUNK LAMP(LEFT)	0.3
808	REAR LICENSE PLATE LAMP(LEFT)	0.6
809	HORN ASSY-GENERIC LOW NOTE	0.3

810	HORN ASSY-GENERIC HIGH NOTE	0.6
811	ENGINE FUSE BOX	0.2
812	LOWER COVER OF ENGINE ROOM FUSE BOX	0.6
813	ENGINE COMPARTMENT FUSE AND ASSEMBLY	0.5
814	FUSE	0.2
815	RELAY	0.2
816	CENTRAL DISTRIBUTION BOX ASSEMBLY	0.5
817	LOWER COVER OF CENTRAL DISTRIBUTION BOX	0.6
818	MULTIMEDIA HOST	0.7
819	DISPLAY-ENTERTAINMENT SYSTEM	0.3
820	USB BOX	0.8
821	USB PANEL	0.2
822	GPS + 4G ANTENNA	5.3
823	LEFT TWEETER	0.4
824	RIGHT TWEETER	0.4
825	LEFT BASS SPEAKER	0.4
826	RIGHT BASS SPEAKER	0.4
827	LEFT FULL RANGE SPEAKER	0.4
828	RIGHT FULL RANGE SPEAKER	0.4
829	SPARE ANTENNA	0.6
830	ANTENNA AT RIGHT FRONT DOOR	0.3
831	ANTENNA AMPLIFIER ASSEMBLY(LEFT)	4.3
832	ANTENNA CABLE ASSEMBLY	1.7
833	ANTENNA AT LEFT FRONT DOOR	0.3
834	BLUETOOTH ANTENNA	4.3
835	360 VIEW AUTOMATIC PARKING CONTROLLER	0.4
836	REVERSING RADAR PROBE	0.6
837	LEFT FRONT AUTOMATIC PARKING ULTRASONIC SENSOR	0.3
838	LEFT REAR AUTOMATIC PARKING ULTRASONIC SENSOR	0.3
839	RIGHT FRONT AUTOMATIC PARKING ULTRASONIC SENSOR	0.3
840	RIGHT REAR AUTOMATIC PARKING ULTRASONIC SENSOR	0.3
841	360 DEGREE PANORAMIC REAR PARKING AID CAMERA	0.9
842	REVERSING CAMERA	0.6
843	PARK ASSIST HOST	0.6
844	FORWARD MILLIMETER WAVE RADAR	1
845	MILLIMETER WAVE RADAR ADAPTER	1.7
846	360 DEGREE PANORAMIC FRONT PARKING AID CAMERA	1.3
847	FRONT MONOCULAR CAMERA	0.4
848	AMBIENT LIGHT AND SUNLIGHT SENSOR ASSEMBLY (INTEGRATED ANTI-THEFT INDICATOR)	0.3
849	GATEWAY(NETWORK MANAGEMENT AND SIGNAL ROUTING)	1
850	RAINFALL SENSOR ASSY	0.2
851	BCM ASSEMBLY-BCM ASSEMBLY	0.8
852	WINDOW CONTROL MODULE	1.3
853	CENTRAL CONTROLLER BRACKET	0.7
854	ELECTRIC BACK DOOR CONTROL MODULE	1.4
855	AUTOMATIC PARKING CONTROL MODULE	1.4
856	LEFT FRONT TPMS SENSOR ASSEMBLY	0.8
857	RIGHT FRONT TPMS SENSOR ASSEMBLY	0.8
858	LEFT REAR TPMS SENSOR ASSEMBLY	0.8
859	RIGHT REAR TPMS SENSOR ASSEMBLY	0.8

860	VEHICLE MOBILE TERMINAL	0.4
861	FULL RANGE SPEAKER (EMERGENCY CALL)	0.5
862	CONDENSER ASSY-AIR CONDITION	3.2
863	AIR CONDITIONER HIGH AND LOW PRESSURE PIPE	1
864	O-RING OF HIGH AND LOW PRESSURE PIPE OF AIR CONDITIONER (INCLUDING LEAK DETECTION AND REFRIGERANT FILLING)	1
865	AIR CONDITIONER PRESSURE SENSOR	0.9
866	AIR CONDITIONING EXHAUST PIPE ASSEMBLY	1
867	PIPE ASSY-EVAPORATOR IN OUTLET	0.9
868	HOSE-HEAT EXCHANGER LOW CONFIGURATION LOW PRESSURE	0.8
869	EVAPORATION TEMPERATURE SENSOR	7.8
870	TUBE ASSY-HEAT EXCHANGER HIGH PRESSURE	0.9
871	VALVE-REFRIGERANT SOLENOID	0.3
872	EVAPORATOR HIGH& LOW PRESSURE PIPE	0.9
873	CONDENSER INLET PIPE	1.6
874	TEMPERATURE SENSOR	7.8
875	ELECTRONIC EXPANSION VALVE	0.9
876	COMPRESSOR ASSEMBLY (INCLUDING LEAK DETECTION AND REFRIGERANT FILLING)	1.5
877	ASSY,HEATER	0.7
878	BRACKET-HVH	0.8
879	PIPE-BATTERY WATER INLET	1
880	PIPE-BATTERY WATER PUMP INLET	1
881	HOSE-HEAT EXCHANGE WATER OUTLET	1
882	HOSE-RR INLET WATER OF ELECTRIC HEATING PUMP	1
883	HOSE-FRT INLET WATER OF ELECTRIC HEATING PUMP	1
884	HEAT EXCHANGE ASSY-HEAT EXCHANGE ASSY	2.2
885	BRACKET-HVAC PIPE	0.3
886	HOSE-HEAT EXCHANGE WATER INLET	2.3
887	HOSE-HEATER WATER OUTLET	1
888	HOSE-HVCH INLET	1
889	PIPE-ELECTRIC HEATING WATER PUMP OUTLET	1
890	HEAT PUMP INTEGRATION MODULE	1.7
891	HEAT PUMP MODULE FEED PIPE	1.6
892	GAS-LIQUID SEPARATOR BRACKET	1.8
893	GAS-LIQUID SEPARATOR FIXING BRACKET	1.8
894	FIXING BRACKET,HEAT PUMP INTEGRATION MOD	1.8
895	INDOOR HEAT EXCHANGER INLET& OUTLET PIPE	1.6
896	HEAT PUMP HIGH& LOW PRESSURE TUBE BRACKE	0.8
897	HIGH& LOW PRESSURE PIPE,HEAT PUMP INTEGR	1.8
898	AIR CONDITIONING UNIT ASSY-AIR CONDITIONING UNIT ASSY	9.2
899	AIR CONDITIONING DRAIN	1.2
900	HEATER (INCLUDING REFRIGERANT FOR LEAK DETECTION)	5
901	HEATING PIPE CLAMP	5.9
902	AIR HEATER INLET AND OUTLET PIPE SEALING SPONGE	5.9
903	HOSE-HEATER OUTLET	1
904	HOSE-HEATER INLET	1
905	HEATER ELEMENT ASSY	7.6
906	HVAC_EVAPORATOR_HOUSING_ASSEY	5.9
907	GENERAL DAMPER MOTOR ASSEMBLY	3
908	MODE DISK	1.3
909	MOTOR TURNTABLE OF COLD AND WARM AIR DOOR	1.4

910	LEFT FOOT BLOWING DUCT ASSEMBLY	0.5
911	RIGHT FOOT BLOWING DUCT ASSEMBLY	1.9
912	COVER PLATE OF HEATING PIPE	0.5
913	Incar temperature sensor	1
914	TRACHEA	1.3
915	ASPIRATOR	3
916	EVAPORATOR_CORE_COVER	5.1
917	EXPANSION_VALVE	4.9
918	EVAPORATOR CORE BODY WITH EXPANSION VALVE ASSY	8
919	SERVO MOTOR	4.9
920	SERVO MOTOR	4.8
921	FOOT VENT,RH	4.7
922	SENSOR-EVAPORATOR TEMPERATURE	7.8
923	FOOT VENT, LH	4.7
924	BLOWER REAR HOUSING	5.2
925	LOWER SHELL OF BLOWER	5.2
926	INNER AND OUTER AIR DAMPER MOTOR TURNTABLE	2.8
927	INNER AND OUTER CIRCULATION HOUSING ASSEMBLY	6.1
928	AIR CONDITIONING FILTER ELEMENT	0.4
929	FILTER ELEMENT COVER PLATE	0.3
930	BLOWER MOTOR ASSEMBLY	0.3
931	THERMISTOR	5.1
932	SPEED-CONTROLLED_MODULE	0.3
933	ANION GENERATOR	0.3
934	AQS	5.2
935	ILTER-POLLEN	0.2
936	BLOWER MOTOR ASSY WITH IMPELLER	0.4
937	AIR CONDITIONING CONTROL PANEL	0.4
938	Outside temperature sensor	0.6
939	ION GENERATOR PURIFIER	0.5
940	AIR QUALITY PM2.5 SENSOR	3.5
941	CONTROL UNIT-THERMAL MAMAGEMENT	4.3
942	FACE BLOWING DUCT AT THE TOP OF INSTRUMENT PANEL	2.8
943	DEFROSTING DUCT ON LEFT SIDE OF INSTRUMENT PANEL	3.1
944	DEFROSTING DUCT ON RIGHT SIDE OF INSTRUMENT PANEL	3.1
945	INSTRUMENT PANEL FRONT DEFROSTING DUCT ASSEMBLY	2.8
946	HOSE ASSY-MID VENT TUBE CONNECT	4.4
947	REAR SEAT LEFT VENTILATION DUCT ASSEMBLY	1.7
948	REAR SEAT RIGHT VENT PIPE ASSEMBLY	1.7
949	AUXILIARY INSTRUMENT PANEL AIR DUCT ASSEMBLY	1.1
950	STEERING WHEEL ASSEMBLY	0.3
951	DRIVER SEAT AIRBAG	0.3
952	CURTAIN ASSY-INFLATABLE RESTRAINT LH	2.1
953	AIRBAG ASSY-INFLATABLE RESTRAINT PASSENGER SEAT MODULE	3.3
954	CURTAIN ASSY-INFLATABLE RESTRAINT RH	2.1
955	AIRBAG ELECTRONIC CONTROL UNIT	1.4
956	LEFT SIDE IMPACT SENSOR	0.4
957	RIGHT SIDE IMPACT SENSOR	0.4
958	FRONT COLLISION SENSOR(LEFT)	0.4
959	BELT ASSY-DRVR SEAT	0.4
960	BELT ASSY-PASGR SEAT	0.4

961	SEAT BELT HEIGHT ADJUSTER	0.4
962	DRIVER SAFETY BELT BUCKLE ASSEMBLY	0.4
963	FRONT PASSENGER SAFETY BELT BUCKLE ASSEMBLY	0.4
964	BELT ASSY-RR SEAT LH	0.6
965	BELT ASSY-RR SEAT RH	0.6
966	SECOND ROW SEAT LEFT SAFETY BELT ASSEMBLY	1.3
967	SECOND ROW SEAT MIDDLE BELT ASSEMBLY	0.9
968	SECOND ROW SEAT RIGHT SAFETY BELT ASSEMBLY	1.4
969	THIRD ROW SEAT LEFT SAFETY BELT ASSEMBLY	1.3
970	THIRD ROW SEAT RIGHT SAFETY BELT ASSEMBLY	1.3
971	JACK ASSEMBLY	0.1
972	TOWBAR	0.1
973	TYRE SLEEVE	0.1
974	JACK ROCKER ASSEMBLY	0.1
975	WARNING TRIANGLE ASSEMBLY	0.1
976	DISASSEMBLY TOOL FOR WHEEL BOLT TRIM COVER	0.1
977	REFLECTIVE VEST ASSEMBLY	0.1
978	TOLERANCE ADJUSTER	0.1
979	EMBLEM	0.3
980	REAR LOGO	0.3
981	TRANSMISSION OIL	0.5
982	BRAKE FLUID (INCLUDING EXHAUST AIR)	0.8
983	COOLANT	0.5
984	DOOR HANDLE PAINTING (SINGLE MATERIAL COST)	1
985	ALL PAINTING-WHOLE VEHICLE (INCLUDING MATERIAL FEE)	48
986	ALL PAINTING-ROOF (INCLUDING MATERIAL FEE)	6.8
987	ALL PAINTING-BONNET (INCLUDING MATERIAL FEE)	6.8
988	ALL PAINTING-REAR BUMPER(INCLUDING MATERIAL FEE)	2.8
989	ALL PAINTING-FRONT BUMPER(INCLUDING MATERIAL FEE)	2.8
990	ALL PAINTING-REAR DOOR RH (INCLUDING MATERIAL FEE)	4.8
991	ALL PAINTING-FRONT DOOR RH (INCLUDING MATERIAL FEE)	4.8
992	ALL PAINTING-LEFT REAR DOOR (INCLUDING MATERIAL FEE)	4.8
993	ALL PAINTING-FRONT DOOR LH (INCLUDING MATERIAL FEE)	4.8
994	ALL PAINTING-BOOTLID OR TAIL GATE(INCLUDING MATERIAL FEE)	4.8
995	ALL PAINTING-SPOILER ASSEMBLY(INCLUDING MATERIAL FEE)	2.7
996	ALL PAINTING-RIGHT SIDE WALL(INCLUDING MATERIAL FEE)	3.9
997	ALL PAINTING-LEFT SIDE WALL(INCLUDING MATERIAL FEE)	3.9
998	ALL PAINTING-FRONT WING RH (INCLUDING MATERIAL FEE)	2.8
999	ALL PAINTING-FRONT WING LH (INCLUDING MATERIAL FEE)	2.8
1000	RIGHT REAR DOOR SILL FULL SPRAYING (INCLUDING MATERIAL FEE)	2.8
1001	RIGHT FRONT DOOR SILL FULL SPRAYING (INCLUDING MATERIAL FEE)	2.8
1002	LEFT REAR DOOR SILL FULL SPRAYING (INCLUDING MATERIAL FEE)	2.8
1003	LEFT FRONT DOOR SILL FULL SPRAY (INCLUDING MATERIAL FEE)	2.8
1004	WAX AND POLISH THE WHOLE CAR	2.8
1005	LOCAL PAINT TOUCH-UP (Roof)(including material charge)	2.6
1006	LOCAL PAINT TOUCH-UP (Bonnet cover)(including material charge)	2.6
1007	LOCAL PAINT TOUCH-UP (Rear bumper)(including material charge)	2.6
1008	LOCAL PAINT TOUCH-UP (Front bumper)(including material charge)	2.6
1009	LOCAL PAINT TOUCH-UP (Right side circumference)(including material charge)	2.6
1010	LOCAL PAINT TOUCH-UP (Right rear door)(including material charge)	2.6
1011	LOCAL PAINT TOUCH-UP (Right rear threshold)(including material charge)	2.6

1012	LOCAL PAINT TOUCH-UP (Right front door)(including material charge)	2.6
1013	LOCAL PAINT TOUCH-UP (Right front threshold)(including material charge)	2.6
1014	LOCAL PAINT TOUCH-UP (Right front wing fender)(including material charge)	2.6
1015	LOCAL PAINT TOUCH-UP (Left circumference)(including material charge)	2.6
1016	LOCAL PAINT TOUCH-UP(left rear door)(including material charge)	2.6
1017	LOCAL PAINT TOUCH-UP (left rear threshold)(including material charge)	2.6
1018	LOCAL PAINT TOUCH-UP (Left front door)(including material charge)	2.6
1019	LOCAL PAINT TOUCH-UP (Left front threshold)(including material charge)	2.6
1020	LOCAL PAINT TOUCH-UP (Left front fender)(including charge)	2.6
1021	RIGHT EXTERIOR REARVIEW MIRROR FULL SPRAY (INCLUDING MATERIAL FEE)	1.8
1022	LEFT EXTERIOR REARVIEW MIRROR FULL SPRAY (INCLUDING MATERIAL FEE)	1.8
1023	LOCAL PAINT TOUCH-UP (Back door)(including material charge)	2.6